

XNET Network Video Server

Install Guide

Ver. 1.0 (090905)



About this Manual

A compatibility and durability test done on this product ensures high performance.

This manual is for XNET Network Video Server users only, and it describes operations related to XNET Network Video Server.

Please read this manual thoroughly paying attention to cautions and warnings before using the product even if you have used similar products before.

Important Notices

The copyright of this manual is owned by CNB Technology Inc.

It is illegal to copy and distribute this manual without permission.

Damages caused by use of parts not recommended and by misuse will not be applicable for support.

Contact the store or the manufacturer immediately if (you think) there is any problem with the product.

Contact the store or the manufacturer before disassembling the product for alteration or repair.

XNET is a trademark of CNB Technology Inc.

This product complies for CE (Europe) and FCC (USA) regulations for industrial/home use electrical device.

Index

1. About XNET	4
1.1. About XNET	4
1.2. Features of XNET	4
1.3. Applications	4
2. About the Product	5
2.1. Contents	5
2.2 Product Information	5
2.3. Functions and designations	6
2.3.1. Outer View	6
2.3.2. Inner View	6
2.3.3 Connecting to Alarm devices	8
3. Product Installation	9
3.1. Hardware Installation	9
3.1.1. Installation	9
3.1.2. Connecting the Cable	10
3.2. Installing IP-Installer Software and Configuring IP address	12
3.2.1. About IP-Installer	12
3.2.2. Configuring IP Address	12
4. Using Web Viewer	14
4.1. Logging In	14
4.2. Web Viewer Page	15
5. Specifications	17

1. About XNET

1.1. About XNET

XNET is an internet based security and surveillance system that is compatible with various network conditions through easy installation and user interface as well as multi-functional compressor Codec such as MJPEG, MPEG-4, and H.264. XNET provides stable real-time surveillance by real time video/ audio at D1 level, local storage for any network problems, and hybrid IP technology that can be used with existing analog CCTV devices.

1.2. Features of XNET

Most advanced Video/ Audio compression technology (MJPEG/MPEG-4/H.264, ADPCM/G726)

Progressive technology - Progressive scan makes the image sharp and clear without ghost effect.

Hybrid IP Technology - CCTV analog video output can be used for existing analog CCTV devices.

Transmission of Multi-Codec stream - Live video signal can be compressed to MJPEG or MPEG-4 (or H.264) and sent to meet various applications of network or user.

2-way Audio Communication (Bi-directional voice communication between Client's PC and XNET)

Smart Event feature - On the top of motion detection and sensor/alarm feature, pre- and post- alarm feature allows automated surveillance without an attendant's monitoring.

Install/ Operation Wizard - Install/ Operation Wizard not only makes it easy for installers and users, but also offers a unified installation setup for massive scale installations.

Up to 3 motion detection areas

Motion Detection – Alarm output and Video/ Audio data transmission to FTP site or e-mail upon detecting a motion.

Supports Various resolutions - NTSC: 704x480, 352x240 PAL: 704x576, 352x288

RS-485 interface for Remote Pan/Tilt control

Remote Control over the network for software upgrade

1.3. Applications

Surveillance (Building, store, factory, parking lot, financial institutions, government buildings, military facilities, etc.)

Remote video monitoring (Hospital, kindergarten, traffic monitoring, remote branch office, weather, environment preservation, and illegal disposal of trash, etc.)

Real time broadcasting over the internet (Resort facility, parties, festivals, etc), remote business meetings, and educational trainings, etc.

2. About the Product

2.1. Contents

Please make sure the following contents are included when you open the package.

Contents	Description	Additional info.
XNET Product	Network Video Server	
Power adapter	Input: 100~240VAC 50-60Hz Output : 12VDC, 5A	
AC power Cord	3 jack cable	
CD	Software and User's manual	

2.2 Product Information

XNET (IJB2000)	Install CD	
	IP-Installer	Viewer Program (XNET-NVR)
Network Video Server (Junction Box)	A software that assigns an IP address to the product	A software that monitors and records Audio and Video signal from the device (supports up to 16 channels)

2.3. Functions and designations

2.3.1. Outer View

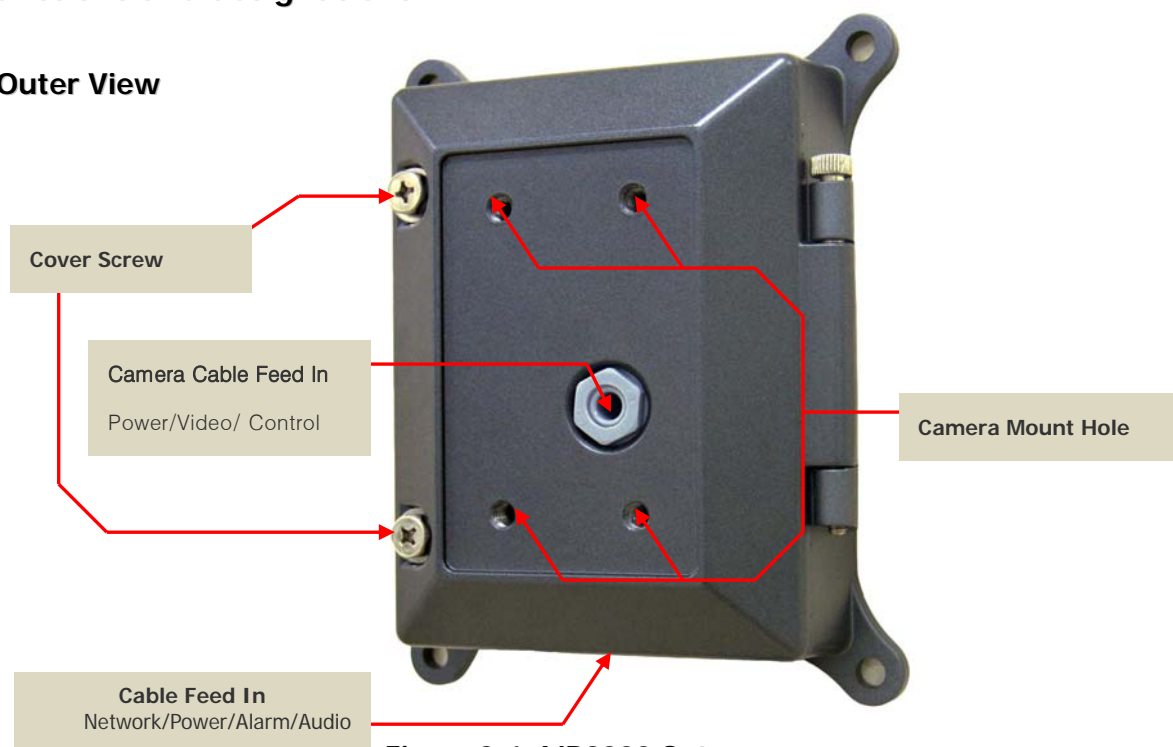


Figure 2-1. IJB2000 Outer

2.3.2. Inner View

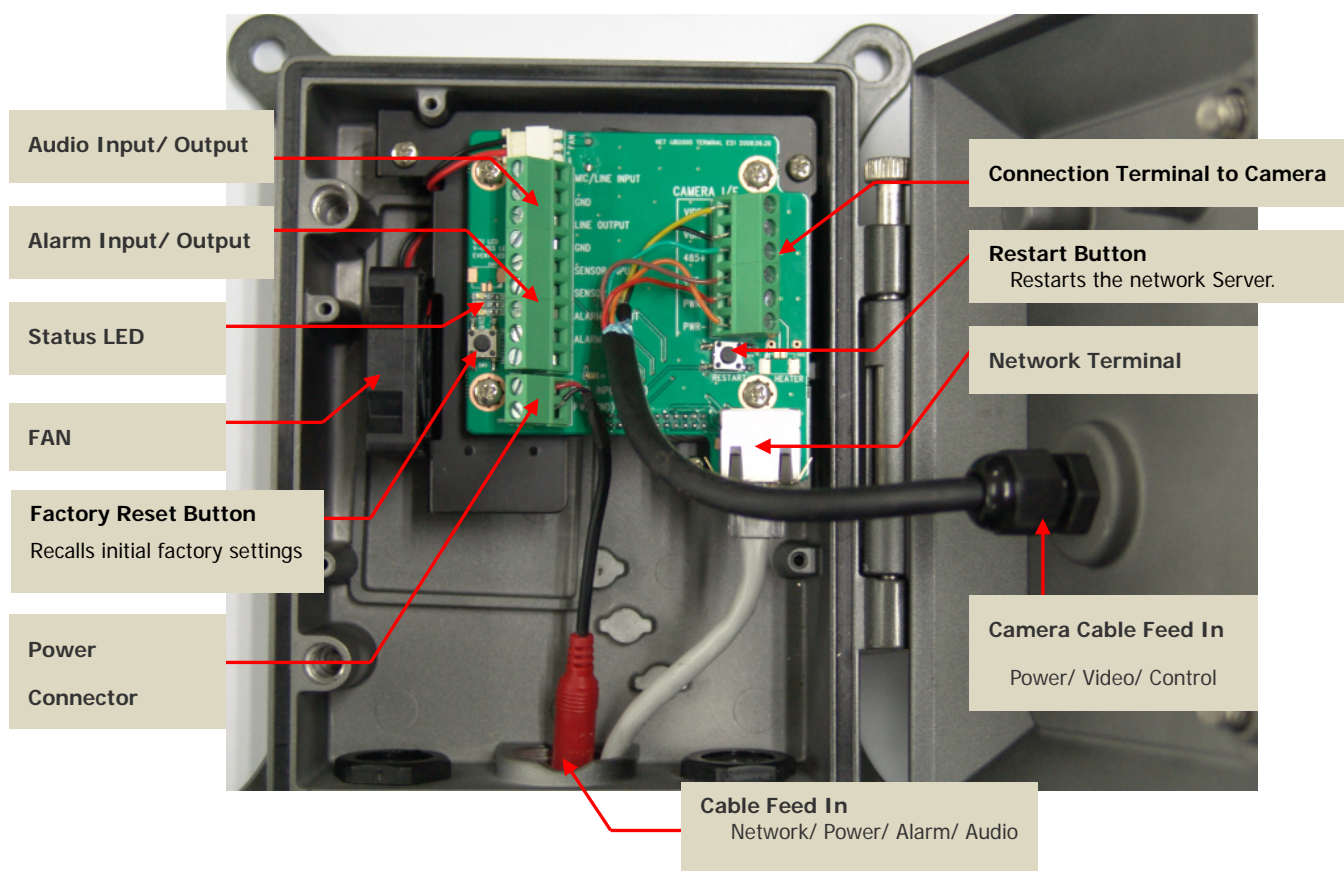


Figure 2-2. IJB2000 Inside

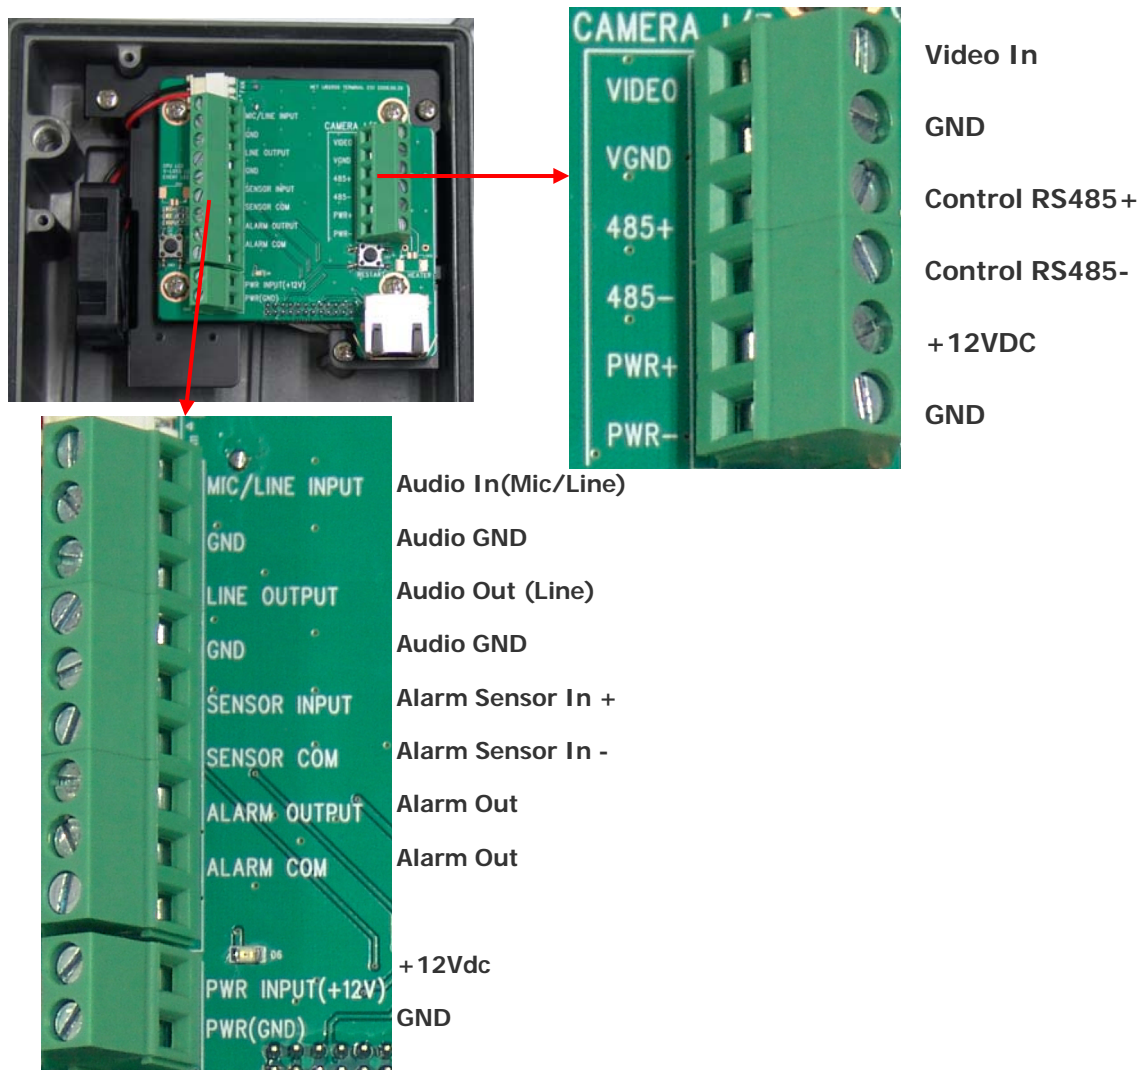


Figure 2-3. Connection Terminal Block

MIC/LINE IN : Connects to auxiliary Audio Device or microphone.

LINE OUT : Audio signal output to a Power Amplified device or Speaker. This can be used to listen to the audio signal sent from a remote PC for Bi-directional Audio communication.

ALARM IN : This connects to an Alarm Sensor signal. Only one sensor can be connected.

ALARM OUT : This connects to an external Alarm device that operates by a relay such as Siren Lamp or Alarm Light. Only one Alarm device can be connected.

Factory Reset Button: Press and hold for more than 3 seconds while power is on to recall factory default settings

Restart Button : Press to restart the network system.

NETWORK : This Ethernet terminal connects to 10Mbps or 100Mbps LAN through an RJ-45 connector.

Status of network connection is displayed in the LEDs on this Terminal.

- **LINK** : Green light indicates that the network is properly connected.
- **ACT** : Yellow light indicates that the XNET system connected to 100Mbps LAN. This green lamp will blink if the system receives data.

Power INPUT: Connect 12V DC Power to this terminal.

Please use the power adapter came in the package.

STATUS LED : Indicates the operation status

- CPU LED : Green light will blink after 50 seconds on power.
- Video Loss LED : Red light indicates that there is no Video Input signal.
- EVENT LED : Green light indicates that Alarm Out signal is turned on.
- POWER LED : Red light indicates that 12V DC power is connected.

2.3.3 Connecting to Alarm devices

Alarm Input

Wires from various sensor type (IR, heat, and magnetic) can be connected to Alarm in(+)/(-) terminal as shown in figure 2.5. (NC or NO of sensor input can be selected at Menu screen.)

Alarm Sensor device requires a separate power source.

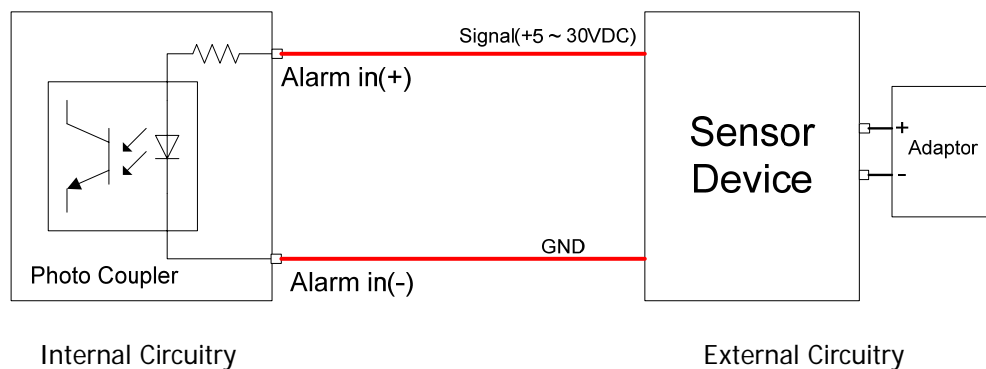


Figure 2-5. Connecting to Alarm Input

Alarm Output

This terminal can only be connected up to AC 30V/400mA or DC 30V/400mA. An additional relay device has to be used to control higher voltage or current.

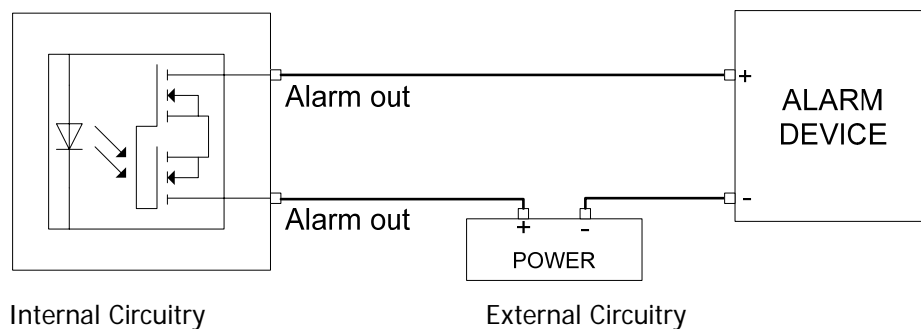


Figure 2-5. Connecting to Alarm Output

3. Product Installation


This section provides brief guidelines to install the XNET quickly and to monitor XNET's Video and Audio signals easily. If you have questions about details not explained in this section or if the product is not functioning as described, please refer to FAQ before contacting the store.

Our homepage is <http://www.cnbtec.com>.

3.1. Hardware Installation


3.1.1. Installation

As shown in the picture, drill 4 screw holes using the guide pattern provided. Insert Anchor screws to the holes and fix the Video Server using screws. Make sure the wall is firm enough to hold the camera and the video server (junction box).

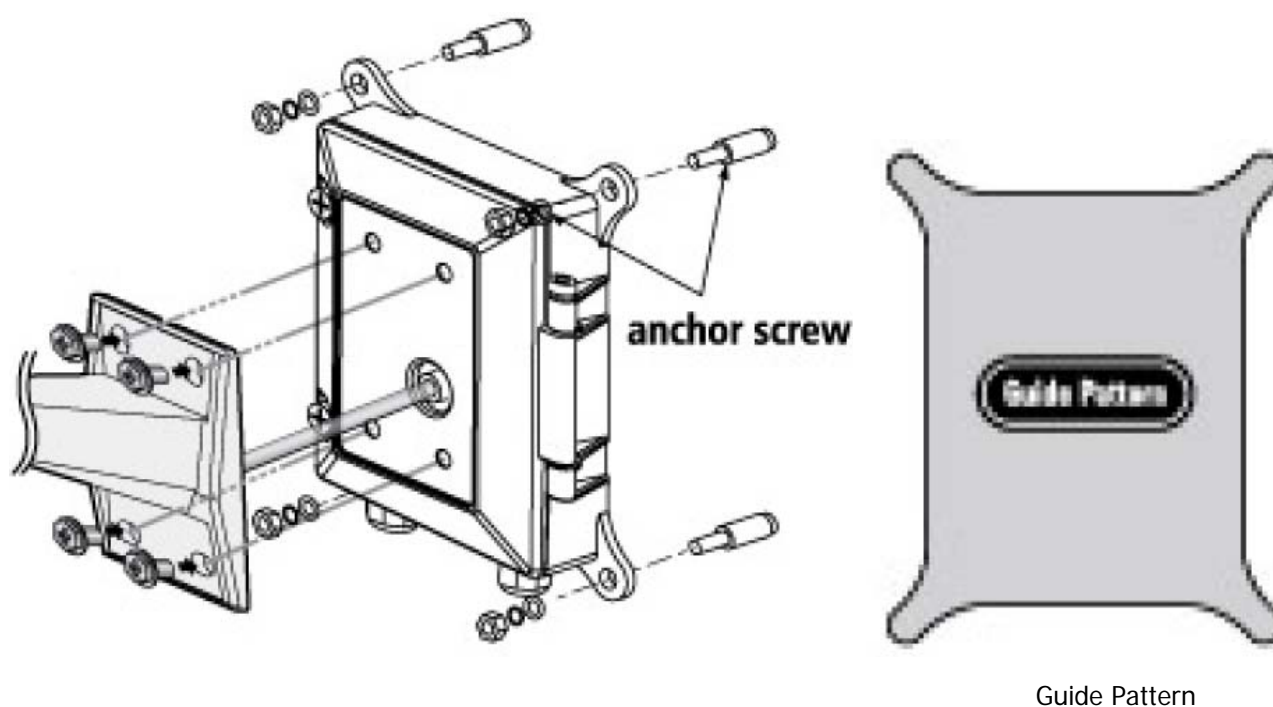


Insert the camera's cable into the feeding hole on the front cover of the junction box, and then mount the camera to the server using the screws.


3.1.2. Connecting the Cable

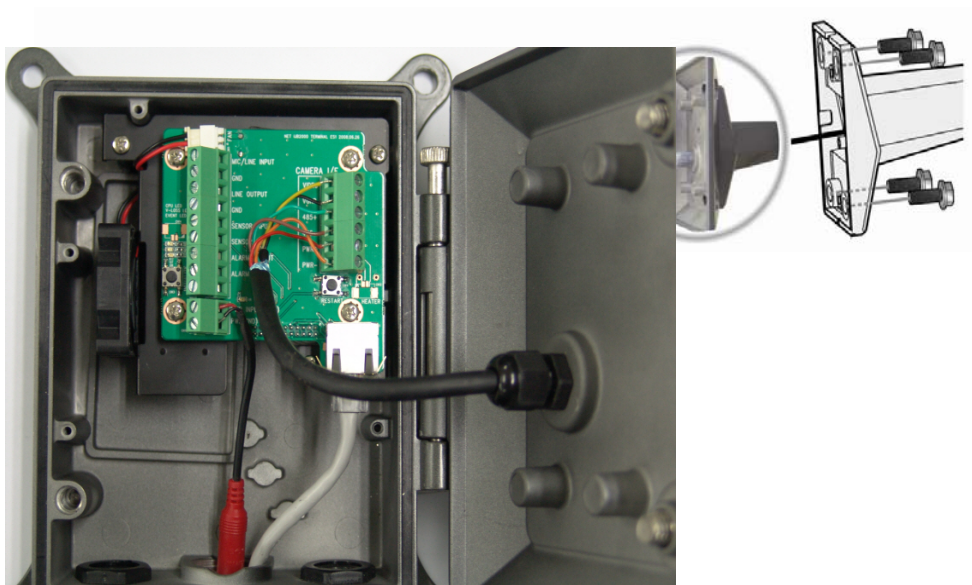

1. Connect the wires according to the detail shown in the table below.
(Cut wires if necessary.)

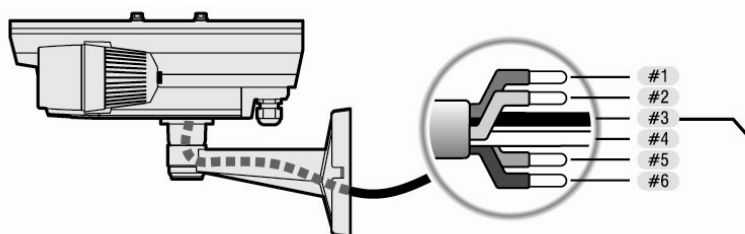

No.	Line Color	Function	Remark
#1	RED	DC12V	DC 12V / 2.5A
#2	ORANGE	GND	GND
#3	BLACK	GND(VIDEO)	GND
#4	YELLOW	VIDEO OUT	1.0Vp-p Composite
#5	GREEN	RS-485 (+)	-
#6	BROWN	RS-485 (-)	-

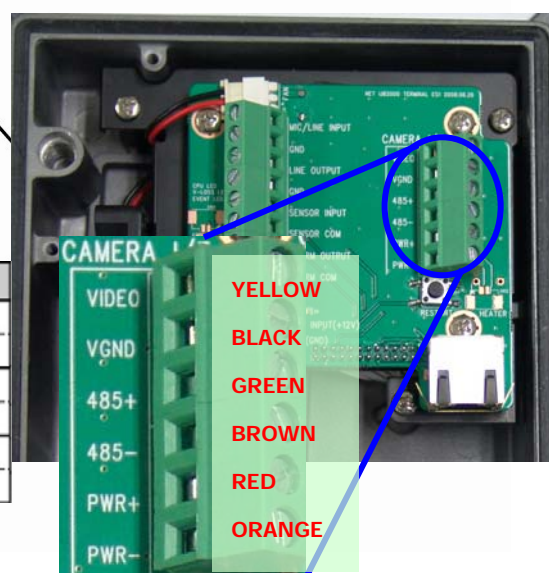

This Junction box is designed to be used with specific cameras. Please contact CNB dealer to ask about purchasing

2. A PC or a laptop computer is required to set up an IP address.
 - Compatible operating system: Windows 2000/ Windows XP/ Windows Vista
 - Since the default IP address of the device is 192.168.123.100, set up the IP address of the computer like the following:
IP Address : 192.168.123.101 Subnet Mask : 255.255.255.0
3. Connect LAN cable to the Network Terminal of the product.(Use a crossover cable when connecting it directly to a PC, and use a direct cable when connecting it to a HUB)

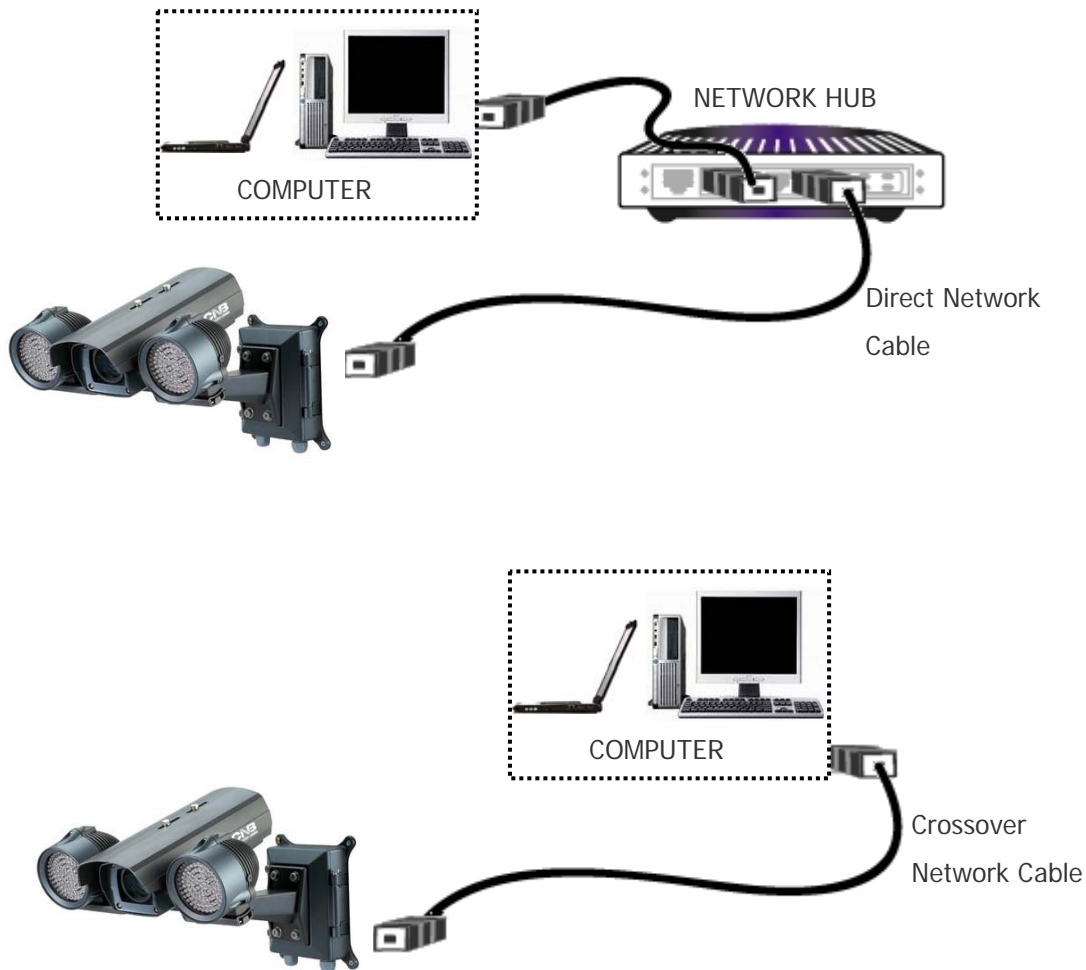


Figure 3-1. Network Connection

4. Connect the device to the power.
5. Use the Alarm Sensor/ output and audio terminal if necessary.

- B. Select the device of which you wish to change the IP address and click **IP** (Set IP Address) button to bring up the following box in Figure 3-3.




The 'Set IP Address' dialog box contains the following elements:

- IP Address Setting** section with two input fields:
 - Serial Number**: 001E81FFFFFF
 - IP Address**: 192 . 168 . 123 . 0
- Instructional text: "To enable IP address assignment, please restart the network camera and wait 10 seconds."
- A horizontal progress bar.
- Buttons: **Set** and **Close**.

Figure 3-3. IP Address box

- C. When you enter the IP address and click Set button, the box shown in Figure 3-4 will appear.

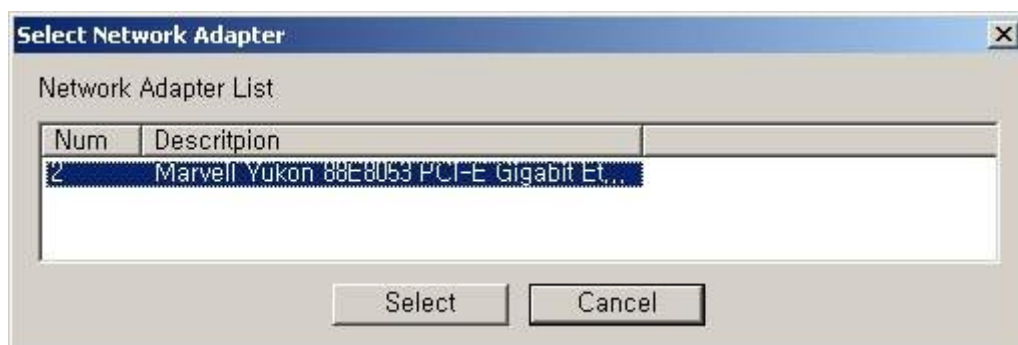

The 'Select Network Adapter' dialog box contains the following elements:

- Network Adapter List** table:

Num	Description
2	Marvell Yukon 88E8053 PCI-E Gigabit Et...

- Buttons: **Select** and **Cancel**.

Figure 3-4. Select Network Adapter Box

- D. Select the adapter and click select button to change the IP address of the device.

4. Using Web Viewer

Connecting to network devices can be done using internet web browser or “XNET-CMS” software. This guide explains about using internet web browser only. For instructions on how to configure network connection using XNET-CMS software, please refer to XNET-CMS Manual, which can be found in the installation CD.

4.1. Logging In

Enter the IP address of the device on the address bar of your web browser and press enter key. Then the following webpage will appear:

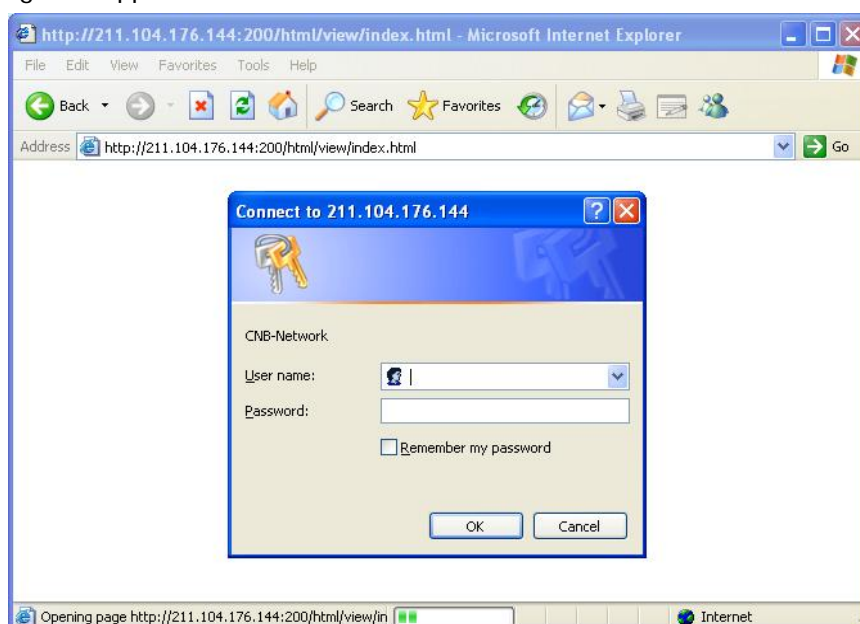


Figure 4-1 Log-in Box

Enter the user name and password to bring up the web viewer page. The default id and password is “root”, “admin” respectively. If you want to use a different HTTP port number from the default value, simply put a colon and port number at the end of the IP address. (For example, enter the following address when changing the port to 8080: **http://192.168.123.100:8080**)

<Address format for accessing as an administrator>

(When using default IP address and port number) ***http://192.168.123.100***

(When IP address and port number changed) ***http://IP address: new port number***



For security purpose, it is recommended to change the administrator's id and password from their default values. Please be careful not to forget them or expose them to others. Please refer to [Web Viewer Manual] for detail.



If you forget the administrator's password, “Factory Reset” is the only way to regain access. However, since this will retrieve all default settings, you need to configure the network settings using IP installer software again.

4.2. Web Viewer Page

Web viewer page consists of Video monitor screen and menu option buttons.



Figure 4-2 Web Viewer Page

Item	Sub Item	Description
Capture	-	Captures and saves the current image as a still picture. The image is saved as jpeg file in the following folder: C:\WxNetCapture
Setting	-	Brings up Menu screen. Setup page for each XNET feature can be opened from this Menu screen. Please refer to [XNET Owner's Manual] for detail.
PTZ	-	Opens up PTZ page. This page can set up control of PTZ movement. Please refer to [XNET Owner's Manual] for detail.
Motion	-	Opens up Motion Detection page. You can add or delete areas for detecting motion in this page. Please refer to [XNET Owner's Manual] for detail.
Multi View	-	Opens up Multi View page. You can view videos from cameras that are programmed in Multi Video Player setup page. Please refer to [XNET Owner's Manual] for detail.
Live View	Main Stream	When this box is checked, Main Stream Video is displayed.
	Sub Stream	When this box is checked, Sub Stream Video is displayed. Dual-Codec needs to be enabled in Video Setup Page in order for Sub Stream to be displayed. Please refer to [XNET Owner's Manual] for detail.

5. Specifications

IJB 2000		Specifications
Video Signal	Input Signal	1ch analog composite input by B3, B4, B5 Series
	Signal	NTSC/PAL video signal
	Compatible Camera Model	B3 Series/ B4 Series/ B5 Series all models
System	Main Processors	32bit Embedded CPU with Linux
	System Memory	NAND Flash Memory : 64MB, DDR Memory : 128MB
Video/Audio	Compression	MJPEG / MPEG4 / H.264
	Frame rate	Dual Mode : MJPEG(15fps) MPEG4 / H.264(NTSC : 30fps, PAL : 25fps)
	Resolution	D1 (NTSC:704*480, PAL:704*576), CIF(NTSC:352*240, PAL:352*288)
	Video streaming	MJPEG / MPEG4(or H.264) Dual mode Constant and variable bit rate in MPEG4 (128kbps ~ 3M bps) Controllable frame rate and bandwidth
	Image settings	Compression level setting Configurable Brightness, Contrast, Saturation
	Audio	Two-way(full duplex / ADPCM or G.726)
Network	Protocol	IPv4, TCP, UDP, RTSP, RTCP, RTP, HTTP, SMTP, FTP, DHCP, UPnP, Bonjour, DNS, DynDNS, IGMP, SAP, ICMP, ARP
	Supported DDNS	CNB DDNS, DynDNS.org, Reference code with SDK
	Video access from Web browser	Camera live view for up to 10 clients
	LAN Interface	Ethernet 10/100 Base-T (RJ-45 Type)
Security	Access level setup	Multiple user access levels with password protection
	Network Security	IP Filtering
Alarm and Event Management	Image detection	Motion Detection(Select 3 Regions – each area)
	Sensor detection	Sensor In, Scheduling, Alarm out
	After Event process	JPEG Image upload over FTP server / SMTP (E-mail Server)
	Local storage	JPEG Image write to Internal memory : Max 32MB
	Pre / Post alarm	Detail time-set : Max Pre alarm 5 sec/ Post alarm 8 sec Local storage(Internal memory : JPEG)
Applications	Browser	Internet Explorer Ver. 6.0 or later
	Monitoring Applications	Web Viewer(Window Web Browser Base) Live view for up to 10 user clients Video Snapshot & recording to file (JPEG, Stream data)
		XNVR Viewer and Utility(IP-Installer, ETC)
Maintenance	System upgrade	Firmware upgrade over HTTP or FTP
	PTZ Control (RS-485)	PTZ Protocol Service(User define update)
Mechanical	Operation Temperature	-10℃ ~ 50℃
	Power	12VDC, Max 5W
	Dimensions / Weight(Net)	160(W) x 198(H) x 58(D) mm

